

# User Manual

## **How to use:**

Upon opening the box you will find:

1. Megaphone horn with attached walkie-talkie/hand mic
2. A carry strap
3. A USB battery (it maybe already installed in the horn body)

Open the back cover and install the USB battery (if it is not already installed in the horn body). Plug the USB connector into the socket, close the back cover and lock it.  
(You can also use 8 x C batteries; please make sure the polarity is correct)

Push the switch to "On". Talk in to the walkie-talkie. You can adjust the volume in the side of the handset. If you push the switch to "Siren" it starts to alarm.  
Attach the strap to the horn for shoulder carrying. You can also attach the walkie-talkie on the back of the horn to free one of your hands.

When the rechargeable battery is low simply remove it from the unit and charge it with any USB power source, i.e. cell phone charger. Change the switch to DC 5V Input when charging and DC 12V Output when installed in the unit. After the battery is fully charged simply install it back into the unit.

## **Attention:**

Take out the battery when the megaphone is not in use for long time.  
Don't direct the horn to the ear of the nearby listener.  
Don't use the siren unless needed.

## **Features:**

Compact size, clear louder sound  
Lightweight and portable, perfect for meetings, sporting events, assembly, etc  
Talk and Siren Switches  
Microphone Volume Control  
ABS Plastic Construction  
Carry Strap

## **Technical Information**

Requires USB Li-ion battery (Included) or 8 x C batteries (not included)  
Overall Length: 350mm  
Bell Width: 250mm